

AIRPORT DIAGRAM

 
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)

AL-50 (FAA)

BIRMINGHAM, ALABAMA

ATIS
 119.4 270.1
 BIRMINGHAM TOWER
 119.9 317.725
 GND CON
 121.7 348.6
 CLNC DEL
 125.675 305.2

D



JANUARY 2015
 ANNUAL RATE OF CHANGE
 0.1° W


FIELD
 ELEV
 650

SE-4, 25 JUN 2015 to 23 JUL 2015



WEST
 FBO
 ILS
 HOLD
 058.7°
 ELEV
 603

FIRE STATION
 RESTRICTED ACCESS
 (prior approval only)

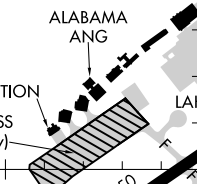


860
 860
 851
 ALABAMA
 ANG
 11998 X 150



45
 TERMINAL
 TWR
 820

HOLD
 AREA
 CARGO
 RAMP

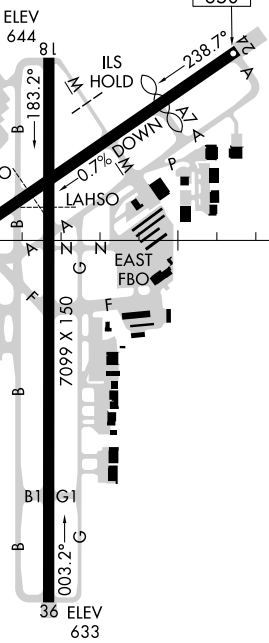

ELEV
 644
 183.2°
 ILS
 HOLD
 238.7°
 0.7% DOWN
 LAHSO
 LAHSO
 EAST
 FBO
 7099 X 150
 003.2°
 36
 ELEV
 633

RWY 06-24
 S-175, D-205, 2S-175, 2D-350
 RWY 18-36
 S-75, D-170, 2S-175, 2D-240

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
 READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

86°46'W

86°45'W

SE-4, 25 JUN 2015 to 23 JUL 2015

AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)

BIRMINGHAM, ALABAMA